

MotoAdmin

MOTOMAN robotec GmbH End User License Agreement.

NOTICE TO USER:

THIS IS A CONTRACT BETWEEN YOU AND MOTOMAN robotec GmbH, Allershausen, Germany. BY INDICATING YOUR ACCEPTANCE BELOW, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies an MOTOMAN robotec GmbH software product ("Software") and related explanatory written materials ("Documentation"). The term "Software" shall also include any upgrades, modified versions, updates, additions, and copies of the Software licensed to you by MOTOMAN robotec GmbH. This copy of the Software is licensed to you as the end user or to your employer or another third party authorized to permit your use of the Software. "You" as used in the remainder of this License Agreement refers to the licensee. MOTOMAN robotec GmbH may have a written agreement with the licensee that varies some of the terms of this Agreement (e.g. user of DEMO versions). The licensee must read this Agreement carefully before indicating acceptance at the end of the text of this Agreement. If you are the licensee and you do not agree with the terms and conditions of this Agreement, decline where instructed, and you will not be able to use the Software. If you cannot understand this license or do not think this license applies to you then please contact the MOTOMAN robotec GmbH.

MOTOMAN robotec GmbH grants to you a non-exclusive license to use the Software and Documentation, provided that you agree to the following:

- 1 Use of the Software. You may install the Software in a single location on a hard disk or other storage device of one (1) computer.
- 2 Make one backup copy of the Software, provided your backup copy is not installed or used on any computer.
- 3 Home Use: The primary user of each computer on which the Software is installed or used may also install the Software on one home or portable computer. However, the Software may not be used on the secondary computer by another person at the same time the Software on the primary computer is being used. . Copyright. The Software is the intellectual property of MOTOMAN robotec GmbH and its suppliers and is protected by copyright law, international treaty provisions, and applicable laws of the country in which it is being used. The structure, organization and code of the Software are the valuable trade secrets and confidential information of MOTOMAN robotec GmbH and its suppliers. Therefore you must treat the Software just as you would any other copyrighted material, such as a book. You may not copy the Software or the Documentation except as set forth in the "Use of the Software" section. Any copies that you are permitted to make pursuant to this Agreement must contain the same copyright and other proprietary notices that appear on or in the Software. You agree not to modify, adapt or translate the Software.

Transfer.

You may not rent, lease, sublicense, or lend the Software or Documentation. You may, however, transfer all your rights to use the Software to another person or legal entity provided that you transfer this Agreement, the Software, including all copies, updates and prior versions, and all Documentation to such person or entity and that you retain no copies, including copies stored on a computer.

Multiple Environment Software/Multiple Language Software/Dual Media Software/Multiple Copies/Upgrades. If this package contains, or, if in connection with the acquisition of the Software contained in this package you receive, two or more operating environment versions of the Software (e.g. Windows95 and WindowsNT), two or more language translation versions of the Software, the same Software on two or more media (e.g., diskettes and a CD-ROM), and/or you otherwise receive two or more copies of the Software, the total aggregate number of computers on which all versions of the Software are used may not be more than one (1), see text above. You may make one back-up copy, in accordance with the terms of this Agreement, for each version of the Software you use. You may not rent, lease, sublicense, lend or transfer versions or copies of the Software you do not use, or Software contained on any unused media, except as part of the permanent transfer of all Software and Documentation as described above.

MOTOMAN robotec GmbH AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR DOCUMENTATION. THE FOREGOING STATES THE SOLE AND EXCLUSIVE REMEDIES FOR MOTOMAN robotec GmbH'S OR ITS SUPPLIERS' BREACH OF WARRANTY, MOTOMAN robotec GmbH AND ITS SUPPLIERS MAKE NO WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD

PARTY RIGHTS, MERCHANTABILITY, SATISFACTORY QUALITY OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL MOTOMAN robotec GmbH OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVINGS) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE EVEN IF AN MOTOMAN robotec GmbH REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY THIRD PARTY. WHERE LEGALLY LIABILITY CANNOT BE EXCLUDED, BUT IT MAY BE LIMITED, MOTOMAN robotec GmbH'S LIABILITY AND THAT OF ITS SUPPLIERS SHALL BE LIMITED TO THE AMOUNT PAID FOR THE SOFTWARE.

Nothing contained in this Agreement shall prejudice the statutory rights of any party dealing as a consumer. Nothing contained in this Agreement limits MOTOMAN robotec GmbH's liability to you in the event of death or personal injury resulting from MOTOMAN robotec GmbH's negligence. MOTOMAN robotec GmbH is acting on behalf of its suppliers for the purpose of disclaiming, excluding and/or restricting obligations, warranties and liability as provided in this Clause 7, but in no other respects and for no other purpose.

Please note that you may not decompile the Software unless it is essential to do so in order to achieve operability of the Software with another software program and you have first requested MOTOMAN robotec GmbH to provide the information necessary to achieve such operability. MOTOMAN robotec GmbH has the right to impose reasonable conditions and to request a reasonable fee before providing such information. Any information supplied by MOTOMAN robotec GmbH or obtained by you, as permitted hereunder, may only be used by you for the purpose stated in the Directive and may not be disclosed to any third party or used to create any software which is substantially similar to the expression of the Software. Requests for information should be directed to the Customer Support: MOTOMAN robotec GmbH Kammerfeldstrasse 1 85391 Allershausen Germany Telephone: +49 (0)8166-90-29 Telefax: +49 (0)8166-90-39

MOTOMAN is a trademark of Yaskawa Electric Corporation. Windows is a registered trademark of Microsoft Corporation.

YOUR ACCEPTANCE OR DECLINE OF THE FOREGOING AGREEMENT WAS INDICATED BY CLICKING ON THE APPROPRIATE BOX DURING INSTALLATION.

Table of contents

1	INTRODUCTION	7
2	INSTALLATION AND BASIC CONFIGURATION	9
2.1	Components	9
2.2	System requirements	9
2.3	Installation of MotoAdmin	9
2.4	Uninstallation of MotoAdmin	9
2.5	Connection types	10
2.6	Configuration of robot controller	11
2.6.1	NX100	11
2.6.2	XRC	13
3	MANAGEMENT FUNCTIONS IN MAIN MENU	15
3.1	File menu	15
3.2	Settings menu	15
3.2.1	Robot Setup...	15
3.3	View menu	16
3.4	Tools menu	17
3.4.1	Check connection...	17
3.4.2	Select language	17
3.4.3	Register licenses...	17
3.5	Mode menu	18
3.6	Menü Hilfe	20
4	WORKING WITH MOTOADMIN	21
4.1	Starting MotoAdmin	21
4.2	Multiple Instances of MotoAdmin	21
4.3	Establish a connection	21
4.4	Close a connection	21
4.5	Exit application	22
4.6	Display working directory	22

4.7	Refresh status	23
4.8	Switch on Servo Power	23
4.9	Change operation mode	24
4.10	Cycle mode	24
4.11	Job execution / Job control	24
4.12	Display Jobs	24
4.13	Edit Jobs	26
4.14	Job Liste laden	27
4.15	Access variables	28
4.16	Watch I/O Signals	31
4.17	Saving, Loading and Deleting files	32
4.17.1	Jobs	33
4.17.2	System data	34
4.17.3	One-Button Backup	35
4.17.4	Deleting data	36
4.18	System Information	37
4.19	Read Alarm History	38

LIST OF FIGURES

Figure 1	Main window MotoAdmin.....	7
Figure 2	Robot profile	15
Figure 3	Com Port settings	16
Figure 4	Selection of robot profile	16
Figure 5	Check connection.....	17
Figure 6	Language selection.....	17
Figure 7	Register licenses.....	18
Figure 8	Mode Menu	18
Figure 9	Change security level	18
Figure 10	Change password	19
Figure 11	Establish connection	21
Figure 12	Close connection.....	22
Figure 13	Working directory	22
Figure 14	Status.....	23
Figure 15	Job window	25
Figure 16	Multitasking task-selection	25
Figure 17	Job Editor window for ascii based editing of jobs.....	26
Figure 18	Display Job list.....	27
Figure 19	Global variables	28
Figure 20	Edit variables	29
Figure 21	Initialization of position variables.....	29
Figure 22	Confirm initialization.....	30
Figure 23	Select type of position variable.....	30
Figure 24	I/O Signals	31
Figure 25	Floppy function.....	32
Figure 26	File group	33
Figure 27	Job selection for saving jobs	33
Figure 28	Saving of system data	34
Figure 29	Message window.....	34
Figure 30	Backup definition files.....	35
Figure 31	Naming of One-Button-Backup folders.....	35
Figure 32	Deleting data	36
Figure 33	System Information.....	37
Figure 34	Alarm History	38

LIST OF TABLES

Table 1	Basic settings NX100.....	11
Table 2	Ethernet/http function	12
Table 3	CommandRemote mode settings NX100.....	12
Table 4	Basic settings XRC	13
Table 5	Context menu job window	26

1 Introduction

MotoAdmin is a software for controlling Motoman Yasnac XRC- und NX100 controllers from remote side.

MotoAdmin runs on Windows Pc with Windows2000/XP operating systems. Connection to robot controller is possible directly via serial interface, using com server device or Ethernet interface (recommended). The necessary hardware is not part of MotoAdmin.

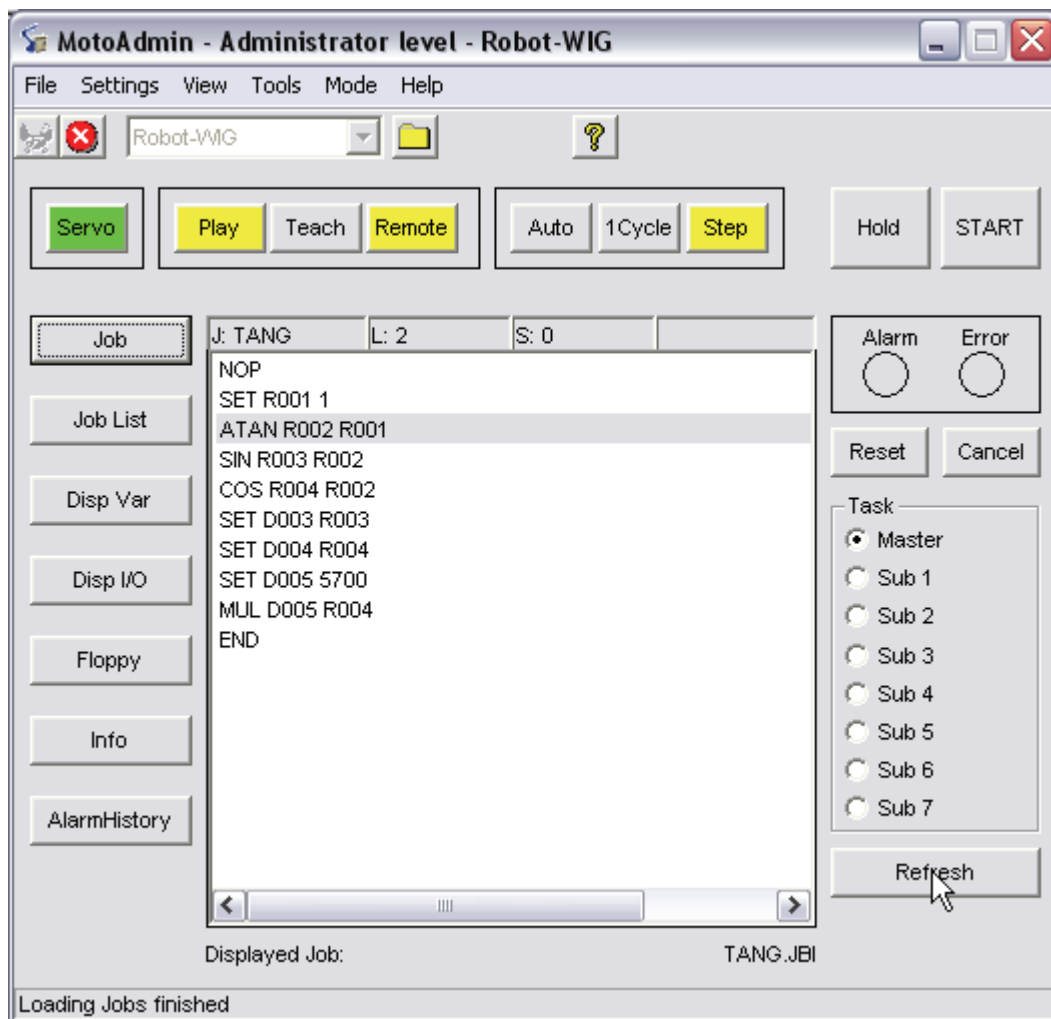


Figure 1 Main window MotoAdmin

To get the full functionality of MotoAdmin, the robot controller must run in „CommandRemote“ mode.

MotoAdmin support the following functions:

- ▶ File access, loading, saving and deleting of job files is possible. System data handling is limited.
- ▶ Backup profiles for One-Button-Backups can be used.
- ▶ Displaying and editing of global variables.
- ▶ Displaying of I/O signals (changing output signals is possible with modified ladder program).

- ▶ Controlling job execution.
- ▶ Display and also reset alarm and errors. Watch alarm history.
- ▶ Get system information like software version data, installed functions, robot types, external axis, position data.
- ▶ Edit job data (without syntax checking).

The functions are grouped into 3 different security zones. It must be considered that depending on selected security level, there are some functions which can cause danger to human and machine. Therefore it is important that only well-trained staff members are consulted to work with MotoAdmin.

MotoAdmin base package is limited to 4 robot controllers. If more robot controllers should be managed by MotoAdmin additional licences must be purchased.

2 Installation and basic configuration

2.1 Components

MotoAdmin package contains:

- ▶ 1 CD-ROM
- ▶ 1 hardware key
- ▶ 1 RS232 cable; robot controller (9pin) <-> pc (9pin)
- ▶ 1 user manual

2.2 System requirements

- ▶ Windows PC
 - WindowsXP/2000
 - Ethernet TCP/IP network interface or serial COM interface
 - 20 MByte free harddisk storage capacity
 - CDROM drive
- ▶ Robot controller XRC or NX100

2.3 Installation of MotoAdmin

Installation of hardware key should be done after software installation. Otherwise there may be some problems in case of USB hardware keys.

Before starting software installation procedure, login to windows system with local administrative rights.

Insert CDROM into CDROM drive of computer. The installation now starts automatically. If not use windows explorer, change to CDROM drive letter and run „cdstarter.exe“ directly from CDROM. After splash screen is displayed select installation of MotoAdmin.

If corresponding message appears restart your computer.

Execution of MotoAdmin is only possible, if the hardware key is attached to the parallel port (optional USB port) of your computer. Please confirm selected interface is a parallel interface and not a 25pin serial one.

2.4 Uninstallation of MotoAdmin

To uninstall MotoAdmin software open windows control panel and select Add/Remove programs.

Select MotoAdmin out of the list of installed software and click on the Uninstall button.

2.5 Connection types

Data communication between pc and robot controller for exchanging data or for remote control is possible by using different communication channels.

Serial communication

For serial communication an appropriate cable is necessary. MotoAdmin package contains such a cable which is a standard null modem cable with 9pin female connectors on both sides.

To connect robot and pc attach one end of the cable to a RS232 port of your pc, the other end of the cable connect to the serial port of robot controller. In case of XRC it is not possible to use RS232 port of Teachbox.

Ethernet communication

XRC robot controllers are not delivered with an Ethernet interface by default. Therefore to use Ethernet communication with XRC an additional extension board must be ordered. For installation of this board refer to „YASNAC XRC Ethernet I/F Board Instructions”. NX100 controllers are always equipped with an Ethernet port.

Also PC system needs to have an Ethernet interface. Connection between PC and controller is established by using standard Ethernet hardware.

2.6 Configuration of robot controller

For establishing a connection between robot controller and PC, some configuration is necessary at controller side:

2.6.1 NX100

Table 1 shows the basic settings necessary for MotoAdmin and NX100.

Parameter	Description	Possible values	RS232C	Ethernet
FD003	Computer Communication	0:disable 1:enable	1	1
FD042	Ethernet Function	0:disable 1:enable	0	1
RS000	Port Protocol	2:BSC Protocol 3:FC1 Protocol	2	2
RS006	Data Transm. Ext.	0:Disable 1:Enable	1	1
RS029	Data loading during Playback	0:disable 1:enable	1	1
RS030	Data Bits	8:8 data bits	8	
RS031	Stop Bits	0:1 stop bit	0	
RS032	Parity	2:even parity	2	
RS033	Baud Rate	8: 19200 Baud 7: 9600 Baud 6: 4800 baud 5:	7	
RS034	Timer A	No. in 0.1s	30	
RS035	Timer B	No. in 0.1s	200	
RS036	ENQ Retry Count	No.	10	
RS037	Data Retry Count	No.	3	
RS038	Block Check Meth.	0: Checksum	0	
RS070	IP address			192
RS071				168
RS072				100
RS073				10
RS074	Subnet mask ¹⁾			255
RS075				255
RS076				255
RS077				0
RS078	Default Gateway			192
RS079				168
RS080				100
RS081				100

Table 1 Basic settings NX100

Ethernet or serial RS232

Parts of the table are marked grey. These are additional settings for Ethernet communication.

If serial communication is to be used, Ethernet function must be disabled.

If software version of robot controller supports Ethernet/http this protocol can be used instead of Ethernet/Bsc. To activate Ethernet/Http some additional configuration must be done.

Parameter	Description	Possible values	RS232C	Ethernet
FD077	Ethernet/Http Function	0:disable 1:enable	0	1

FD078	Ethernet/Http Function	0:disable 1:enable	0	1
-------	---------------------------	-----------------------	---	---

Table 2 Ethernet/http function

Ethernet/http must also be selected during setup of robot profiles in MotoAdmin (see Figure 2).

Ethernet configuration dialog im maintenance mode

Current software versions of NX100 robot controller support Ethernet configuration in maintenance mode with special user interface. This dialog is accessible by executing the following steps:

- ▶ Start maintenance mode.
Maintenance mode is executed, if the *MainMenu* key is pressed during power on of controller.
- ▶ Login to *Extended Mode*.
(For TCP/IP configuration *ExtendedMode* is suitable. For activating Ethernet function manufacturer mode („Yaskawa Modus“) is necessary. This mode can only be accessed by Motoman service staff members.)
Execute System=>Security=>Select mode and Insert ID.
- ▶ Configuration dialog can be accessed by executing:
System=>Setup=>Optional Functions=>Network
(System=>Setup=>Optional Functions=>Ethernet Detail)

Using right TCP/IP address data

The displayed TCP/IP data should be seen as an example. If PC has the address 192.168.100.11 and a subnet mask of 255.255.255.0 a communication would be possible, if proper cabling (Hub, Switch or direct connection with crosslink cable) is assumed. Physical connection is properly established, if ping command is successful.

CommandRemote settings

To access robot controller by MotoAdmin, controller must run in host mode. Besides the basic settings there are four more parameters which influence host mode.

- ▶ CommandRemote mode:
CommandRemote mode is activated by enabling special pseudo input signal: Main-Menu=>In/Out=>Pseudo Input Signal=>Command remote selection.
- ▶ Remote Mode:
To enable remote mode, put rotary switch on teachbox to position *Remote*.
- ▶ RS005/RS007-Parameter:
Parameter section.

Command Remote	Remote	RS005+RS007	Available Function
X	X	1	Host All-Commands
X	X	0	Host All-Commands
X	O	1	Host Read-Only
O	X	1	Host Read-Only
O	O	1	Host Read-Only

Table 3 CommandRemote mode settings NX100

2.6.2 XRC

Table 1 shows the basic settings necessary for MotoAdmin and XRC

Parameter	Description	Possible values	RS232C	Ethernet
FD003	Computer Communication	0:disable 1:enable	1	1
FD042	Ethernet Function	0:disable 1:enable	0	1
RS000	Port Protocol	2:BSC Protocol 3:FC1 Protocol	2	2
RS006	Data Transm. Ext.	0:Disable 1:Enable	1	1
RS029	Data loading during Playback	0:disable 1:enable	1	1
RS030	Data Bits	8:8 data bits	8	
RS031	Stop Bits	0:1 stop bit	0	
RS032	Parity	2:even parity	2	
RS033	Baud Rate	8: 19200 Baud 7: 9600 Baud 6: 4800 baud 5:	7	
RS034	Timer A	No. in 0.1s	30	
RS035	Timer B	No. in 0.1s	200	
RS036	ENQ Retry Count	No.	10	
RS037	Data Retry Count	No.	3	
RS038	Block Check Meth.	0: Checksum	0	
RS070	IP address			192
RS071				168
RS072				100
RS073				10
RS074				255
RS075	Subnet mask ¹⁾			255
RS076				255
RS077				0
RS078				192
RS079	Default Gateway			168
RS080				100
RS081				100

Table 4 Basic settings XRC

Ethernet or serial RS232

Parts of the table are marked grey. These are additional settings for Ethernet communication. If serial communication is to be used, Ethernet function must be disabled. XRC robot controllers are not delivered with an Ethernet interface by default. Therefore to use Ethernet communication with XRC an additional extension board must be ordered. For installation of this board refer to „YASNAC XRC Ethernet I/F Board Instructions”. If serial communication is to be used, Ethernet function must be disabled.

Ethernet configuration dialog in maintenance mode

XRC robot controller support Ethernet configuration in maintenance mode with special user interface. This dialog is accessible by executing the following steps:

- Start maintenance mode.

Maintenance mode is executed, if the *TopMenu* key is pressed during power on of controller.

- ▶ Login to *Extended Mode*.
(For TCP/IP configuration ExtendedMode is suitable. For activating Ethernet function manufacturer mode („Yaskawa Modus“) is necessary. This mode can only be accessed by Motoman service staff members.)
Execute Area key=> Security=>Select mode and Insert ID.
- ▶ Configuration dialog can be accessed by executing:
System=>Einstellungen=>Optionale Funktionen=>Ethernet Detail.

Using right TCP/IP address data

The displayed TCP/IP data should be seen as an example. If PC has the address 192.168.100.11 and a subnet mask of 255.255.255.0 a communication would be possible, if proper cabling (Hub, Switch or direct connection with crosslink cable) is assumed. Physical connection is properly established, if ping command is successful.

CommandRemote settings

To access robot controller by MotoAdmin, controller must run in host mode. Besides the basic settings there are four more parameters which influence host mode.

- ▶ CommandRemote mode:
CommandRemote mode is activated by enabling special pseudo input signal: Top-Menu=>In/Out=>Pseudo Input Signal=>Command remote selection.
- ▶ Remote Mode:
To enable remote mode, hit remote key on controller cabinet.

3 Management functions in main menu

3.1 File menu

To close MotoAdmin application select *File=>Exit*.

3.2 Settings menu

Settings menu contains *Robot Setup...* menu, where robot profiles can be created, edited or removed.

3.2.1 Robot Setup...

After selecting *Robot Setup...* menu, the following dialog appears.

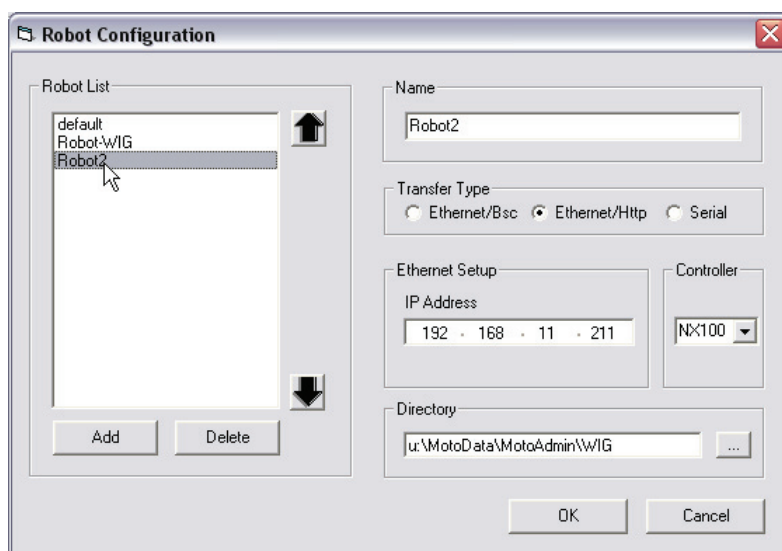


Figure 2 Robot profile

With the *Add* and *Delete* buttons robot profiles can be added or removed. For each profile a unique name must be inserted.

In the second step the transfer type must be selected. Basically Ethernet or serial communication can be used, dependent on how the robot controller is connected to the MotoAdmin PC.

In case of serial communication the parameters of serial interface must be specified. This can be done by selecting *Setup...* button. These settings must correspond with the settings on robot controller side. Refer to Figure 3 for the default (factory) settings of Yasnac controllers serial port.

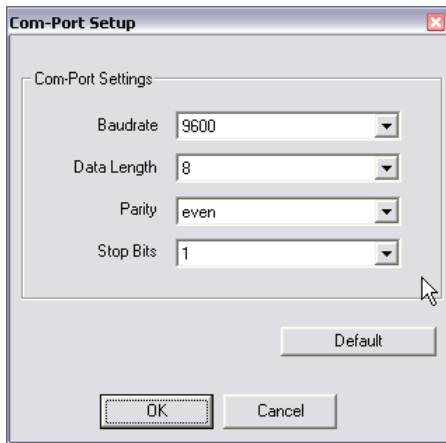


Figure 3 Com Port settings

In case of Ethernet communication the IP address of robot controller must be inserted.

In the last step controller type and a working directory must be specified. It is recommended to create a new working directory for every robot controller, because all data is stored in this directory.

E.g.

C:\Cell1\Robot1

C:\Cell1\Robot2

C:\Cell2\Robot1

All configuration data is stored in a file named *robot.ini*. So after application is closed data is still present.

The name of the currently selected robot profile can be seen in the toolbar of MotoAdmin. The list contains all available robot profiles, which are created in previous steps. To connect to another robot controller, stop current session, select desired robot profile out of the list and push the connect button again. Only one connection per time is possible in MotoAdmin. The name of the last selected profile is automatically stored in MotoAdmin.

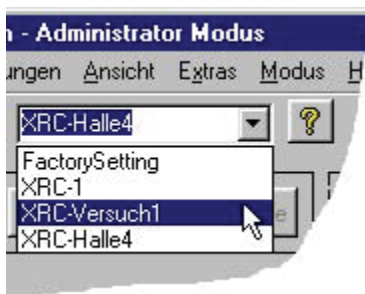


Figure 4 Selection of robot profile

3.3 View menu

Use *View* menu to enable/disable Toolbar or Statusbar.

3.4 Tools menu

3.4.1 Check connection...

The *Check connection...* menu allows to establish a test connection to the selected controller. If the connection is successful the following message is displayed.

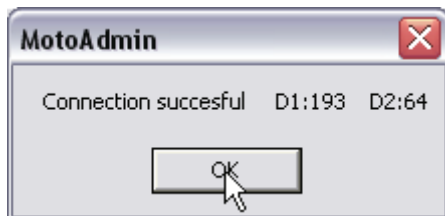


Figure 5 Check connection

After confirming the message connection is closed.

3.4.2 Select language

MotoAdmin supports multiple languages. For installing a new language an new language file (*.lng) must be created. The currently present languages file can be edited, if the structure is not changed. Language selection dialog is shown at application start by default.



Figure 6 Language selection

To prevent MotoAdmin from displaying the language selection dialog at every application start, select option *Ignore language selection at program start* on dialog. Changing language is still possible by selecting menu item *Select language...* in *Tools* menu.

3.4.3 Register licenses...

In the standard package of MotoAdmin 4 licenses are included. That means a maximum of 4 robot profiles can be created. If more robots are necessary additional licenses are available. The dialog is necessary to update license information. Fill in the serial number of your product and a check number, which you will get after purchasing the license fee.

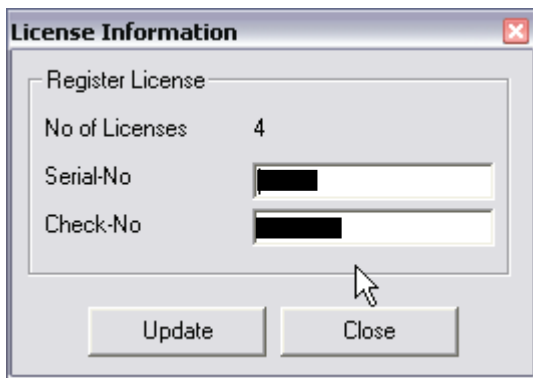


Figure 7 Register licenses

3.5 Mode menu

The current security level can be changed by selecting the *Change security level* menu item.



Figure 8 Mode Menu

To change to a different level select desired level and enter password.



Figure 9 Change security level

If the entered password is valid for the selected security level the level will be changed. You can see the current security level in the title bar of the main window.

Es existieren in MotoAdmin 3 Sicherheitsmodi:

► Operator Mode:

The operator is allowed to do control functions. He can connect to robots (if the robot configuration is already available), he has the rights to get status information, to read inputs and outputs, to read variables and to save robot data files. The Operator Level is the default level. So no password is needed.

► **Programmer Mode:**

In addition to the functions the operator can execute, the programmer is allowed to start robot jobs and to load robot data files.

► **Administrator Mode:**

The administrator is allowed to do everything which is possible in MotoAdmin.

The passwords can be changed by clicking on the *Change password* menu item. In the displayed dialog the new password must be entered twice. The new password must be entered twice.



Figure 10 **Change password**

To change the password your security level must be higher than the level you want to change the password. So the operator is not allowed to change a password, while the administrator can change all passwords.

Das erfolgreiche Ändern des Passworts wird mit einer entsprechenden Meldung bestätigt.

Wichtig:

The actions which can be made in operator mode are safe. But if you are logged on with higher security level keep in mind that you are able to move the robot. Do not move the robot if you cannot see the robot manipulator.

Motoman robotec GmbH is not responsible for damages caused by using MotoAdmin.

Info:

The initial passwords of administrator and programmer level are set to **motoadmin**.

3.6 Menü Hilfe

The help menu should be accessed if there are problems or questions concerning the functions of MotoAdmin.

4 Working with MotoAdmin

4.1 Starting MotoAdmin

If the default settings are used during installation of MotoAdmin you can start it as follows:

- search for group *Motoman\MotoAdmin* in MS Windows program manager
- click on *MotoAdmin*

If the language selection dialog is displayed after starting application, select desired language.

4.2 Multiple Instances of MotoAdmin

It depends on the selected connection protocol if one or multiple instances can access a robot controller at the same time. It makes no difference if these instances are running on the same or different PC's.

If the connection protocol is (siehe Figure 2) Ethernet/http, multiple instances can connect to the same robot controller. In contrast Ethernet/Bsc allows only one client.

Innerhalb einer Instanz von MotoAdmin kann gleichzeitig nur auf eine Robotersteuerung zugegriffen werden.

If you want to connect your PC to multiple robot controller at the same time you have to open multiple instances of MotoAdmin.

4.3 Establish a connection

Select one robot profile out of the list of already defined robot profiles and push corresponding toolbar button.



Figure 11 Establish connection

In the status bar a message *Connected* is displayed.

4.4 Close a connection

An active connection can be closed with the *Disconnect* button..



Figure 12 Close connection

In the status bar *Not Connected* is displayed.

4.5 Exit application

To close application select menu item *File=>Exit*.

4.6 Display working directory

In the working directory all data of the robot is stored. To display contents of working directory in a windows explorer window, push the corresponding button. The working directory can be changed in the robot profile configuration dialog (Figure 2).

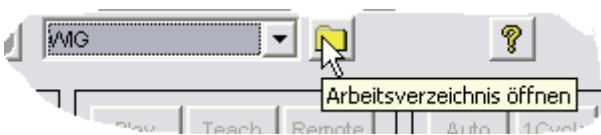


Figure 13 Working directory

4.7 Refresh status

Basically the display of MotoAdmin is of static nature.

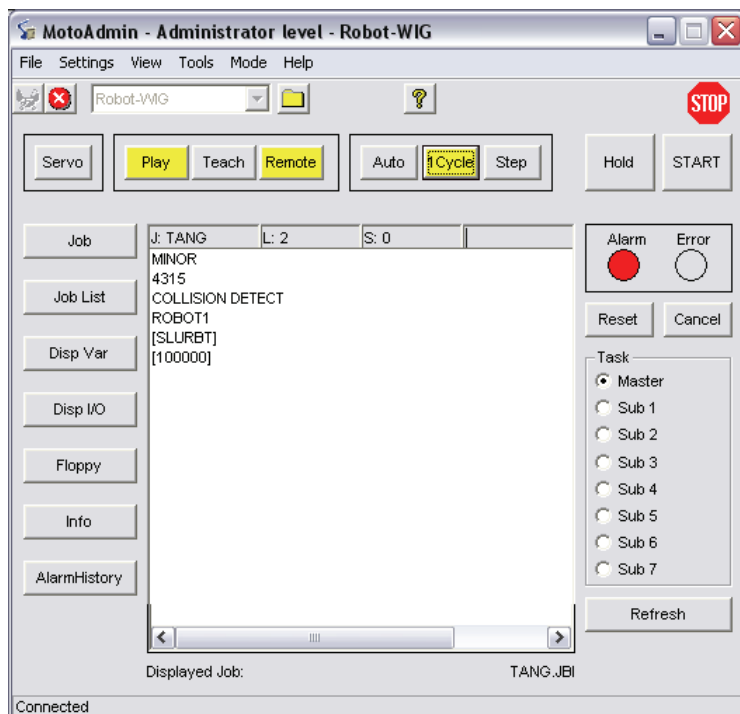


Figure 14 Status

The status of the robot is not displayed continuously. So changes are not displayed automatically. But there are also some functions in MotoAdmin, which refresh the status display. To display the current status of the robot you can click on the *Refresh* button.

The status information contains error or alarm status information for example. MotoAdmin signals an alarm or an error graphically. You have to click on the *Reset* button to reset an alarm. To confirm an error you have to click the *Cancel* button.

Another status item is the Emergency Stop signal, which is displayed in the upper right corner (refer to Figure 14) of MotoAdmin.

4.8 Switch on Servo Power

If the controller is in play mode you can switch on the servo power by selecting the *Servo* button. It is necessary to have servos on before moving the robot.

A special wiring is required for starting servo power from remote.

XRC:

At XRC controller connect: pin 5 - EXVON1+ and pin 6 - EXVON1 as well as pin 7 - EXVON2+ and pin 8 - EXVON2 on XC001 board, connector CN05.

NX100:

In case of NX100 controller connect pin 29 - EXVON+ and pin 30 - EXVON- on MTX-connector block -X18 (see cabinet door).

4.9 Change operation mode

To set robot controller in teach or play mode use the *Play* or *Teach* button. Please notify that it is not possible to use each function in each operation mode..

In case of NX100 controller full functionality is only available if rotary switch at programming pendant is set to *Remote*. This mode is called Remote/Play mode. In MotoAdmin it is possible to change to Remote/Teach mode, if parameter S2C177 is set to 0.

4.10 Cycle mode

There are 3 different Cycle modes. Die Zyklus-Auswahl gestattet die Auswahl des Operationszyklus, d.h. sie legt fest, ob nach Betätigen von *Start* ein Job einmal ausgeführt wird (Cycle), permanent (Auto) bzw. ob jeweils nur ein Schritt ausgeführt wird (Step).

4.11 Job execution / Job control

With MotoAdmin a job can be started remotely. Therefore the controller must be in Play mode (see chapter 4.9) and the Servo power must be switched on (see chapter 4.8).

By pushing *Start* button the job is executed. Job execution can be stopped at each time by selecting *Hold* button. To exit job execution *Hold* button must be selected again. With *Start* button job execution can be resumed. Different button colors show the current status of job execution.

4.12 Display Jobs

After connecting to MotoAdmin the current job of the main task is displayed. The job window is called by selecting *Job* button.

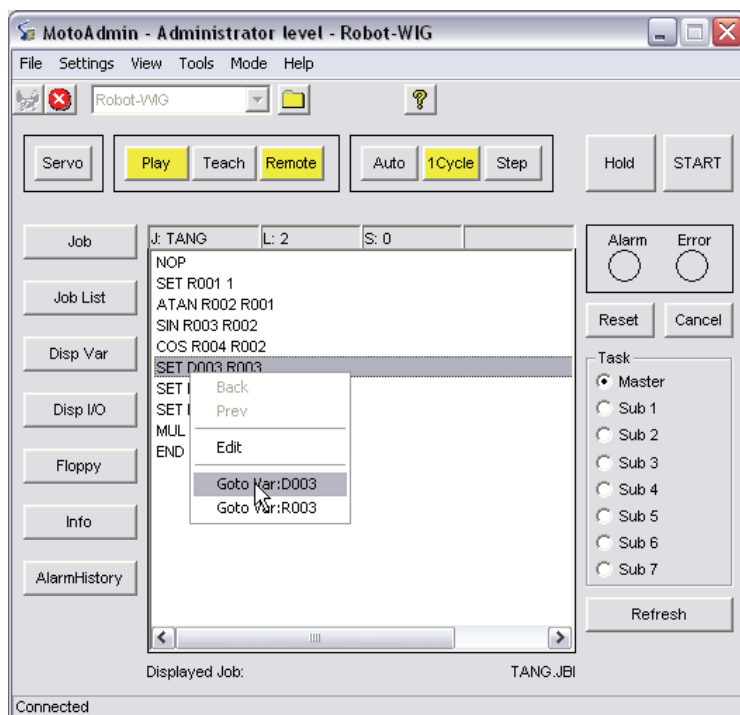


Figure 15 Job window

Task:

Dependent on the job structure there might be some jobs running in parallel SUB tasks. By selecting the desired task the corresponding job is displayed, if available.

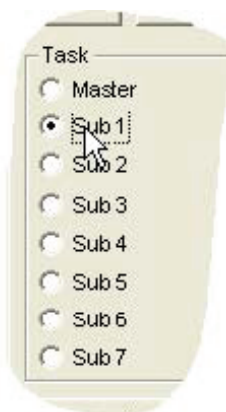


Figure 16 Multitasking task-selection

The Job button always displays the currently selected task

Job status line

The job status line shows the active job of the selected task in addition to current line and Step number.

Job window context menu

Context menu of job window is displayed by pushing right mouse button. Some of the following commands are available, dependent on the current selected job line.

Befehle	Aktion
Back	Calls previous job in job history

Next	Calls next job in job history
Edit	Opens job in job editor window
Goto Var:	Opens displayed variable directly
Goto IN#:	Opens displayed input directly
Goto OT#:	Opens displayed output directly
Goto Job:	Open displayed job directly

Table 5 Context menu job window

Displayed job

The jobname of the currently displayed job in job window is written below the job window.

4.13 Edit Jobs

Editing job, which can be initiated by selecting menu *Edit...* in context menu of job window is done without checking syntax. Therefore it is only suitable for experienced programmers. Other less experienced programmers can use MotoAdmin for downloading/uploading job files to PC. Then they should use JobEditor software to edit file with automatic syntax check.

In the Edit window job content and also job header can be edited without limitations. To store modified job on robot controller select *Save* button..

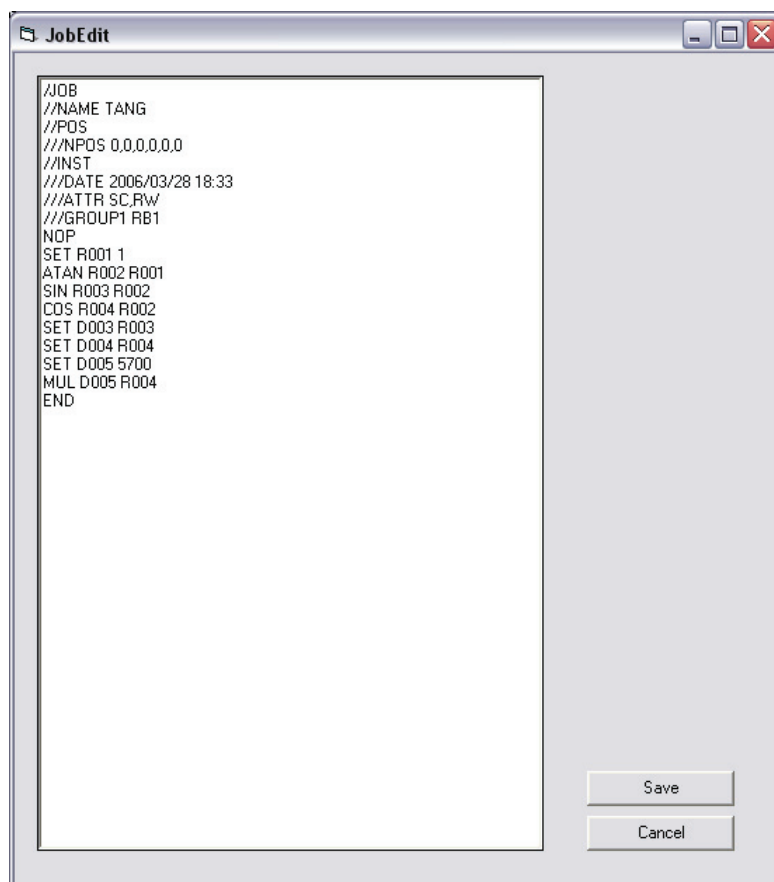


Figure 17 Job Editor window for ascii based editing of jobs

4.14 Job Liste laden

To display a list of jobs stored in the robot controller click on the *Job List* button..

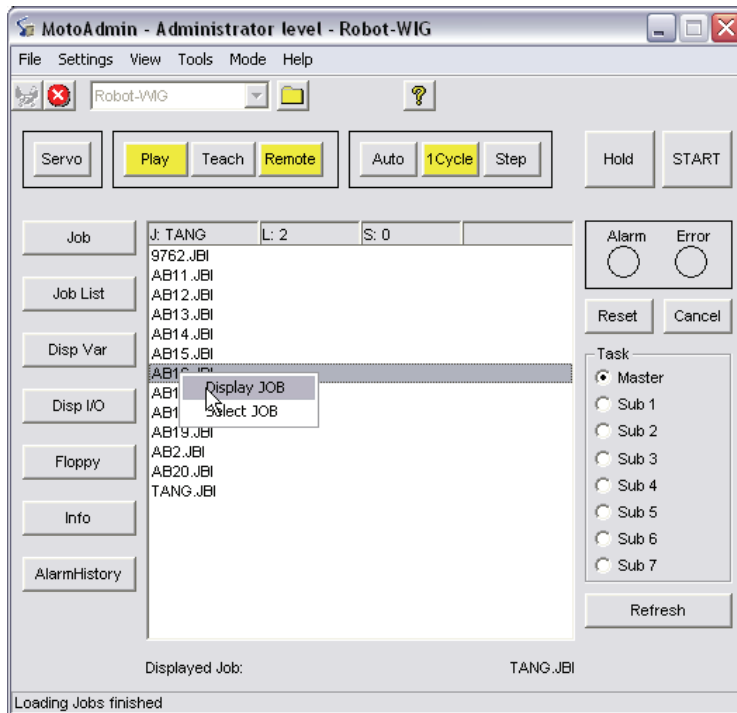


Figure 18 Display Job list

Context menu of job list

Context menu of job list can be used to select a job for execution or to display job content.

4.15 Access variables

Select *Disp Var* to open the variable dialog.

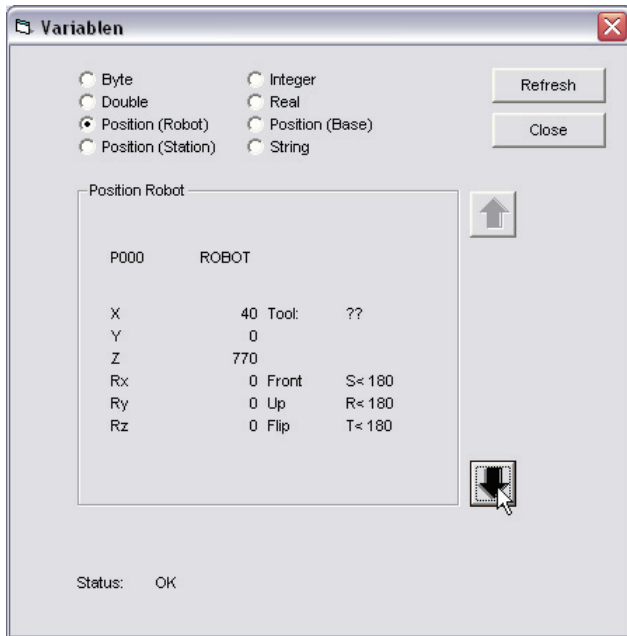


Figure 19 Global variables

In the upper part of the window you can specify the variable type. The following types are available:

- ▶ Byte
- ▶ Integer
- ▶ Real
- ▶ Double Integer
- ▶ Position variable Robot
- ▶ Position variable Base
- ▶ Position variable Station
- ▶ String

To navigate through the variables use the arrow button or click on variable and insert desired variable number.

You can edit the values of the variables. To do so, click on the value of the variable. An input box appears at the bottom of the window. You can now enter the new value. To stop editing and transmit the new value to the controller press *Enter*. If you want to cancel editing without transmitting the entered value to the robot press *Escape*.

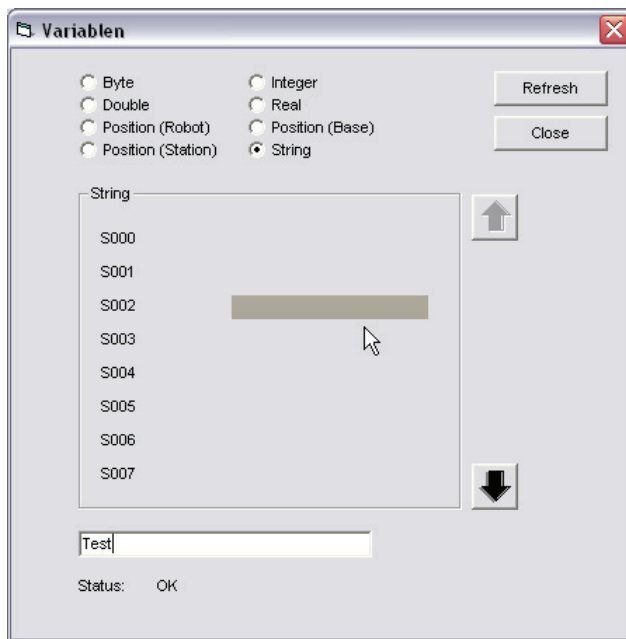


Figure 20 Edit variables

If a position variable is not yet initialized asterisks will appear instead of the values.

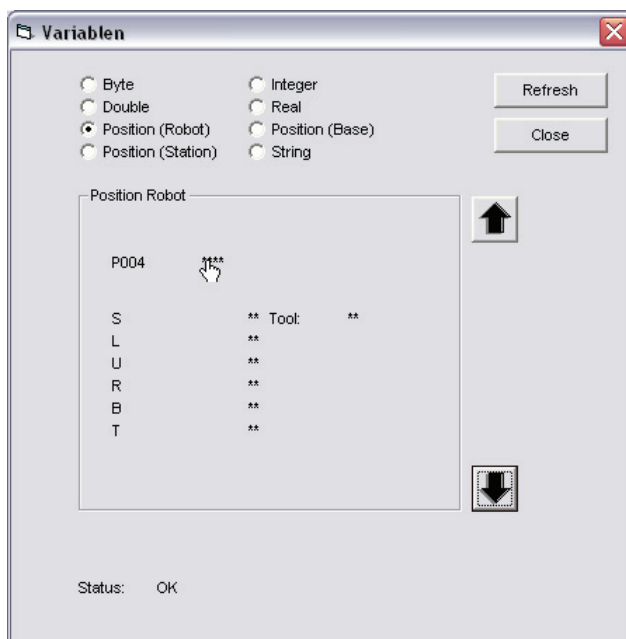



Figure 21 Initialization of position variables

Position variables can be initialized by clicking on the type of the variable (****, Pulse, Robot, Base etc.). If a position variable is reinitialized the old values get lost. The following message appears:



Figure 22 Confirm initialization

In the next step the type of position variable has to be selected.

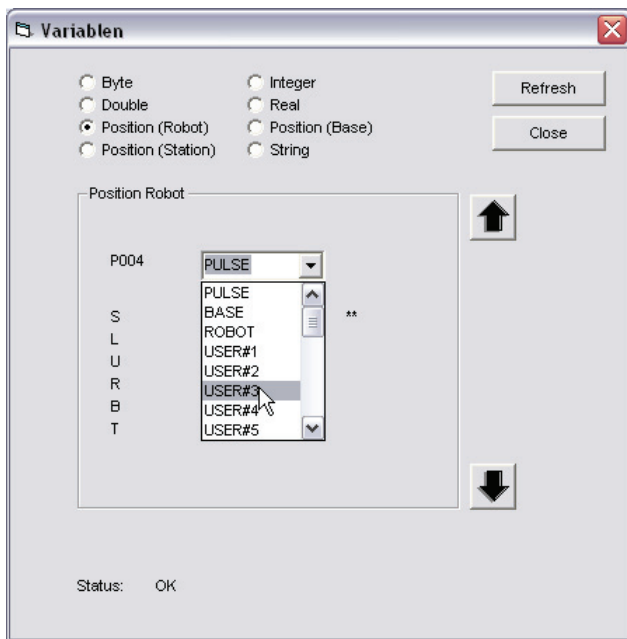**Figure 23** Select type of position variable

The display is static. To update the variable values you have to click on the *Refresh* button.

Press *Close* to return to main window.

4.16 Watch I/O Signals

To display I/O signals select [Disp I/O] from the main window. This opens a new window where you can select the type of I/O signals you want to check. The following signal types are available:

- ▶ External Inputs
- ▶ External Outputs
- ▶ Universal Inputs
- ▶ Universal Outputs
- ▶ Special Inputs
- ▶ Special Outputs
- ▶ ·AUX Relais
- ▶ ·System Status
- ▶ ·Pseudo Input Signald
- ▶ ·Network Inputs
- ▶ ·Network Outputs

Use the arrow buttons to navigate through the outputs or inputs. All outputs are read-only. You can only write "Network IN" signals. So if there are some other signals you want to set by MotoAdmin, you have to map these signals to "Network IN" signals by changing the ladder program of the controller (see LadderEditor software).

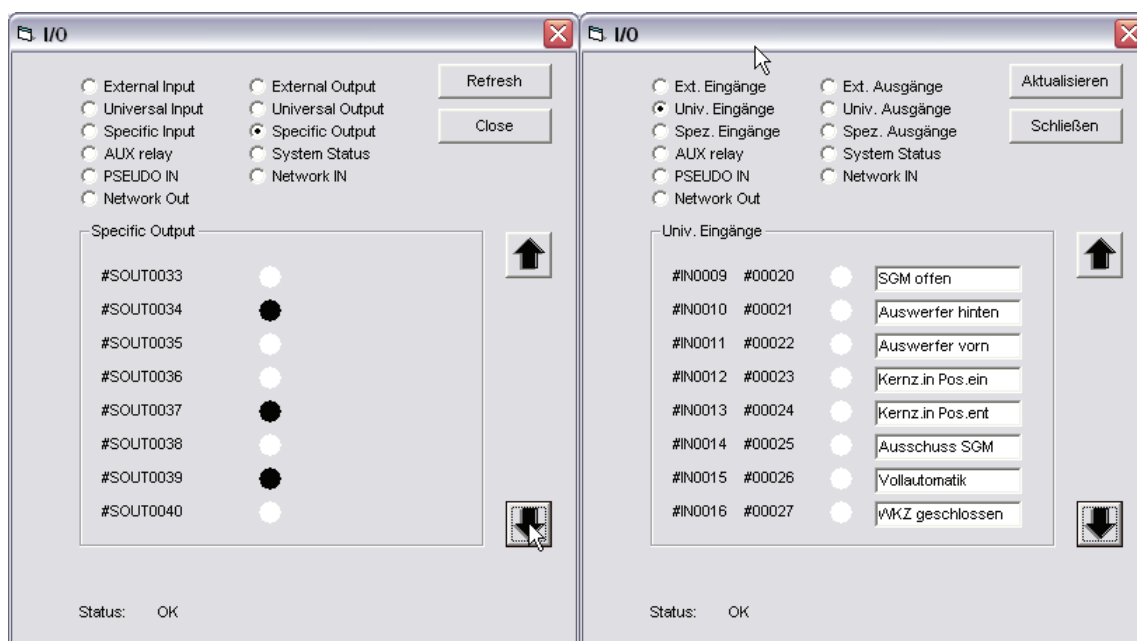


Figure 24 I/O Signals

The display of the I/O signals is static. To update the displayed values you have to click on the *Refresh* button. Select *Close* to return to the main window of the application.

4.17 Saving, Loading and Deleting files

MotoAdmin can transmit jobs and system data from robot to PC and from PC to robot. Saving and loading data is available after selecting the *Floppy* button. Dependent on the current security level the following operations are possible.

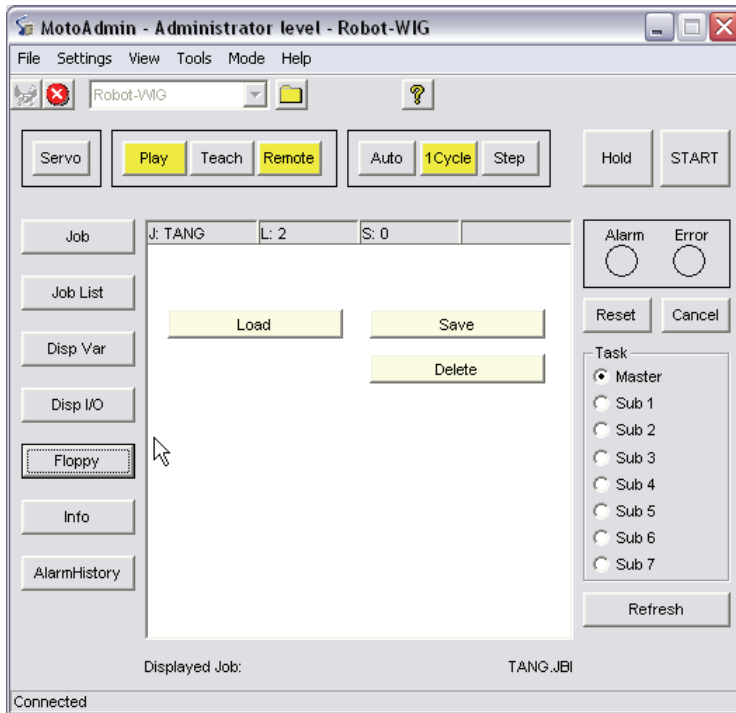


Figure 25 Floppy function

In the first step you have to select the desired operation:

- ▶ **Save:** Transmit data from Robot to PC.
- ▶ **Load:** Transmit data from PC to Robot.
- ▶ **Delete:** Delete data on PC or Robot (only jobs).

Loading data is only accessible in programmer or administrator mode.

In the second step you have to select the data type.

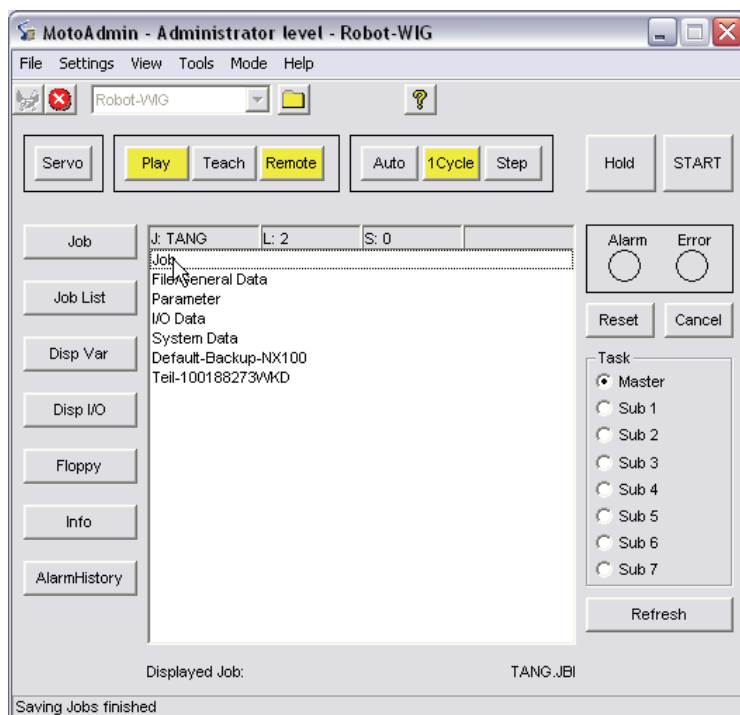


Figure 26 File group

4.17.1 Jobs

If Jobs is selected all available jobs in the robot controller (save) or all available jobs in the working directory of the current robot configuration (load) are displayed.

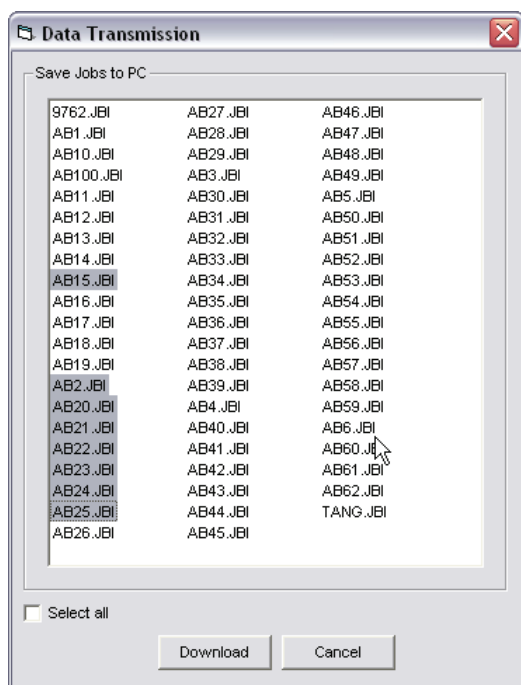


Figure 27 Job selection for saving jobs

You can select the desired jobs by clicking on the job name in the list. Hold the Shift or Ctrl key to select multiple jobs.

4.17.2 System data

To load or save system data like parameter, tool data, condition data etc. you have to select file group first. In the following dialog you can mark the available files. You have to take into account that depending on the Robot controller (software, installed options) there might be files which cannot be loaded or saved.

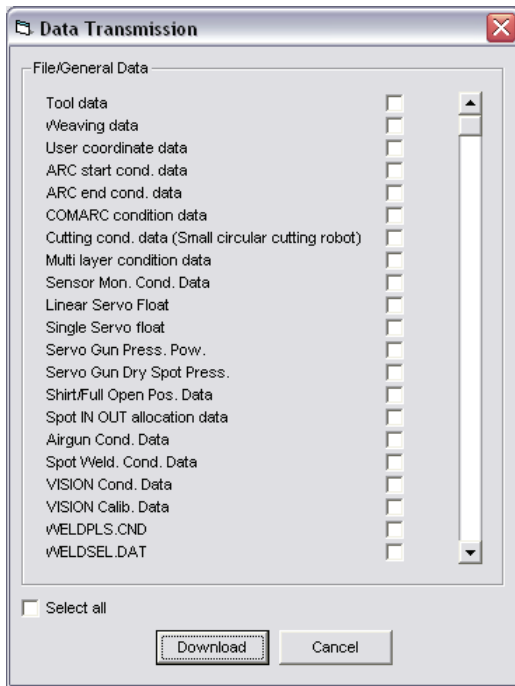


Figure 28 Saving of system data

A window is displayed where you can see if operation was successful or not.

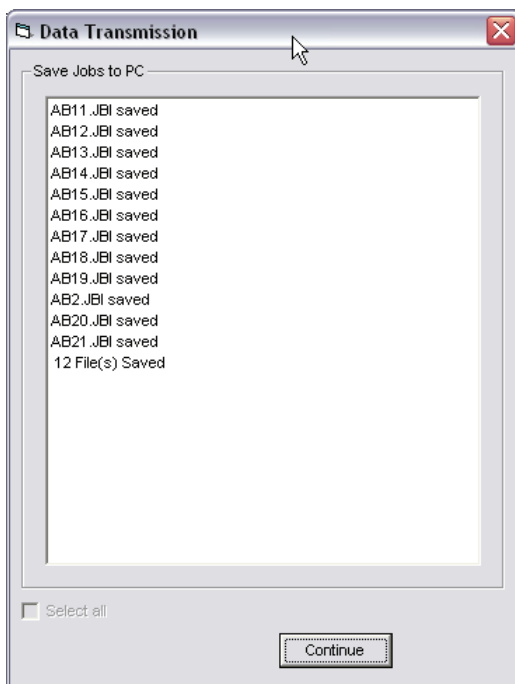


Figure 29 Message window

4.17.3 One-Button Backup

MotoAdmin can also work with backup definition files. These files contain a list of those files, which should be integrated in the backup of the selected robot controller.

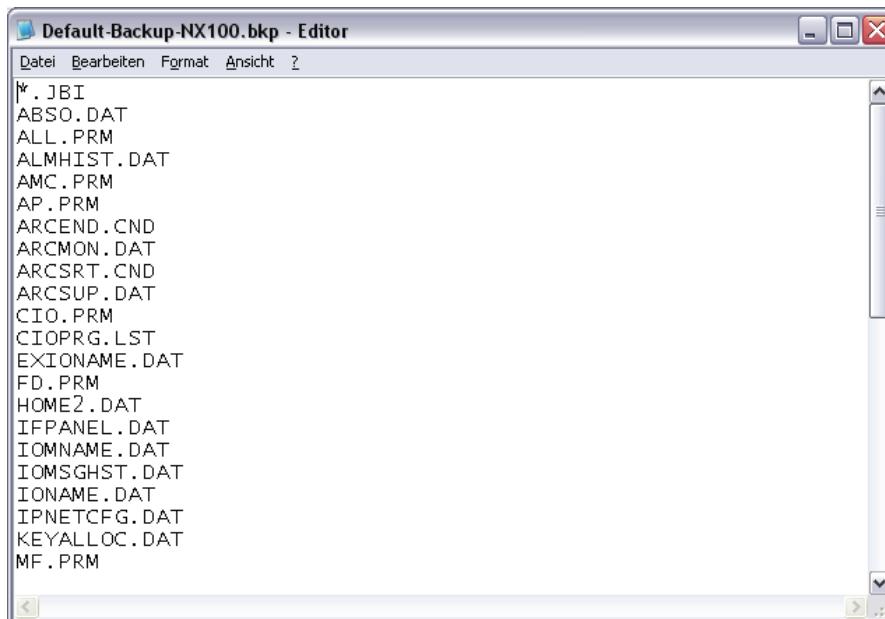


Figure 30 Backup definition files

Beside the full filename also *.JBI can be used as a placeholder for all available jobs on controller. Backup definition files can only be used in case of saving data. For one controller multiple backup definition files can be defined (see Figure 26). The files must be stored in the working directory of the robot controller. The files can be created with an ascii editor and must have *.bkp file extension.. The saved data is stored in subfolders of the working directory. The folder names contain a time and data information in addition to the backup definition file name.

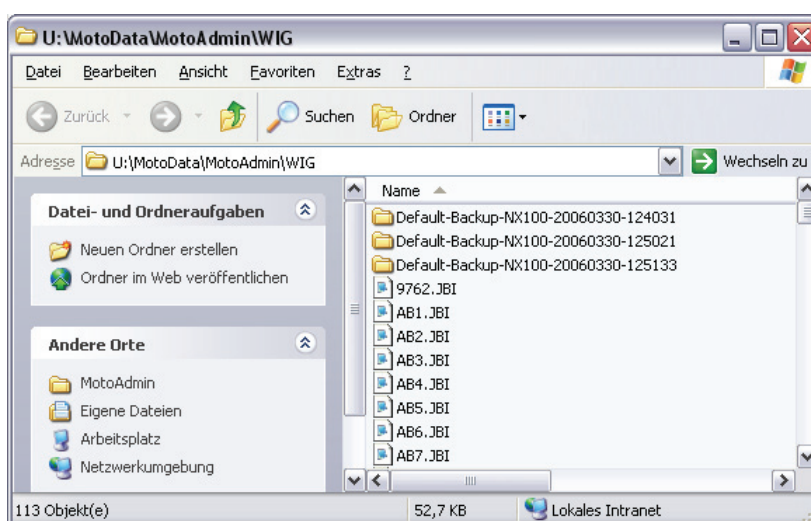


Figure 31 Naming of One-Button-Backup folders

4.17.4 Deleting data

If the Floppy menu item *Delete* is selected, you can choose whether to delete a file on Robot or on PC:

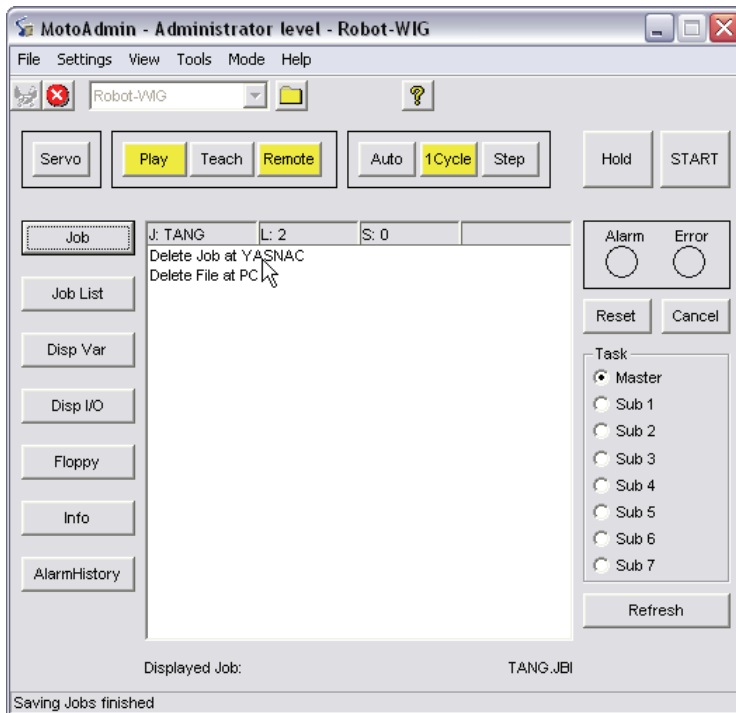


Figure 32 Deleting data

Only jobs can be deleted on Robot side.

4.18 System Information

The System Information dialog is displayed after selecting *Info* button. This dialog contains basic information of selected robot controller.

- ▶ Software version,
- ▶ Robot type,
- ▶ Base axis and external axis,
- ▶ Current pulse and cartesian position,
- ▶ Installed functions.

The 'Info' dialog box displays the following information:

Version:

```
//DATE : 2006/04/05 16:05:46
//SYSTEM NO : NS3.08.00A(US/DE)-28
//PARAM NO : 2.10
//APPLI : ARC WELDING
//LANGUAGE : 3.08-28-00, 3.08-28-00
//REVISION
NCP01 3.08,-----
NPP01 3.20-00, 1.56
AX*#0 3.21-00, 1.10
```

Position:

Frame:

Tool:

1:	17430	7:	0
2:	-30080	8:	0
3:	-50943	9:	0
4:	10800	10:	0
5:	15404	11:	0
6:	-33312	12:	0

Groups:

Robot	Axis	Base Axis
HP20-Z0*	6	0
S1	1	0

Functions:

Description	Value
Arc monitoring function	1
Arc-ON condition chang...	1
Collision detection functi...	1
Coordinated motion	1
Data transmission	1

Buttons: Refresh, Schließen

Figure 33 System Information

4.19 Read Alarm History

Alarm History can be accessed by selecting *AlarmHistory* button. The Alarm History is sorted by date/time so that newest item are listed on top.

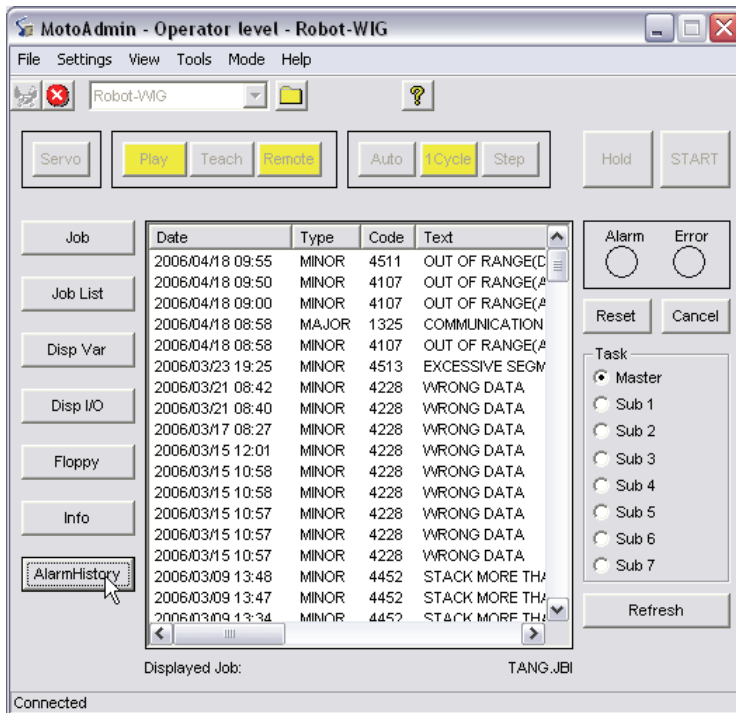


Figure 34 Alarm History

Imprint

MOTOMAN robotec GmbH
Kammerfeldstraße 1
85391 Allershausen
Germany
Phone 00498166900
Fax 0049816690103

